




Flashing Blackout Comms Onto a Pager



Install a compatible SD card

This step is not absolutely required, but is highly recommended as it will allow you to easily backup your data/config, and transfer it to another device if you wish. If you use an SD card, it becomes kind of like a SIM card for Blackout Comms.

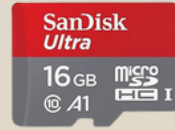

Other 32GB and smaller SD cards may work, but these are known to work.



Connect the Pager to PC or Mac

Use a **high quality data cable**, not just a charge cable.

Put Pager into “Boot Mode”

1. Press & Hold
2. Tap
3. Release



Flash Firmware Onto the Pager

In Chrome or Brave browser, visit:
chatters.io/firmware

- or -

www.offgridcomms.club/firmware

Choose “Lilygo Pager” as the device, click **connect**, and follow prompts.

